CL06 ENGINE EXPLODED VIEW

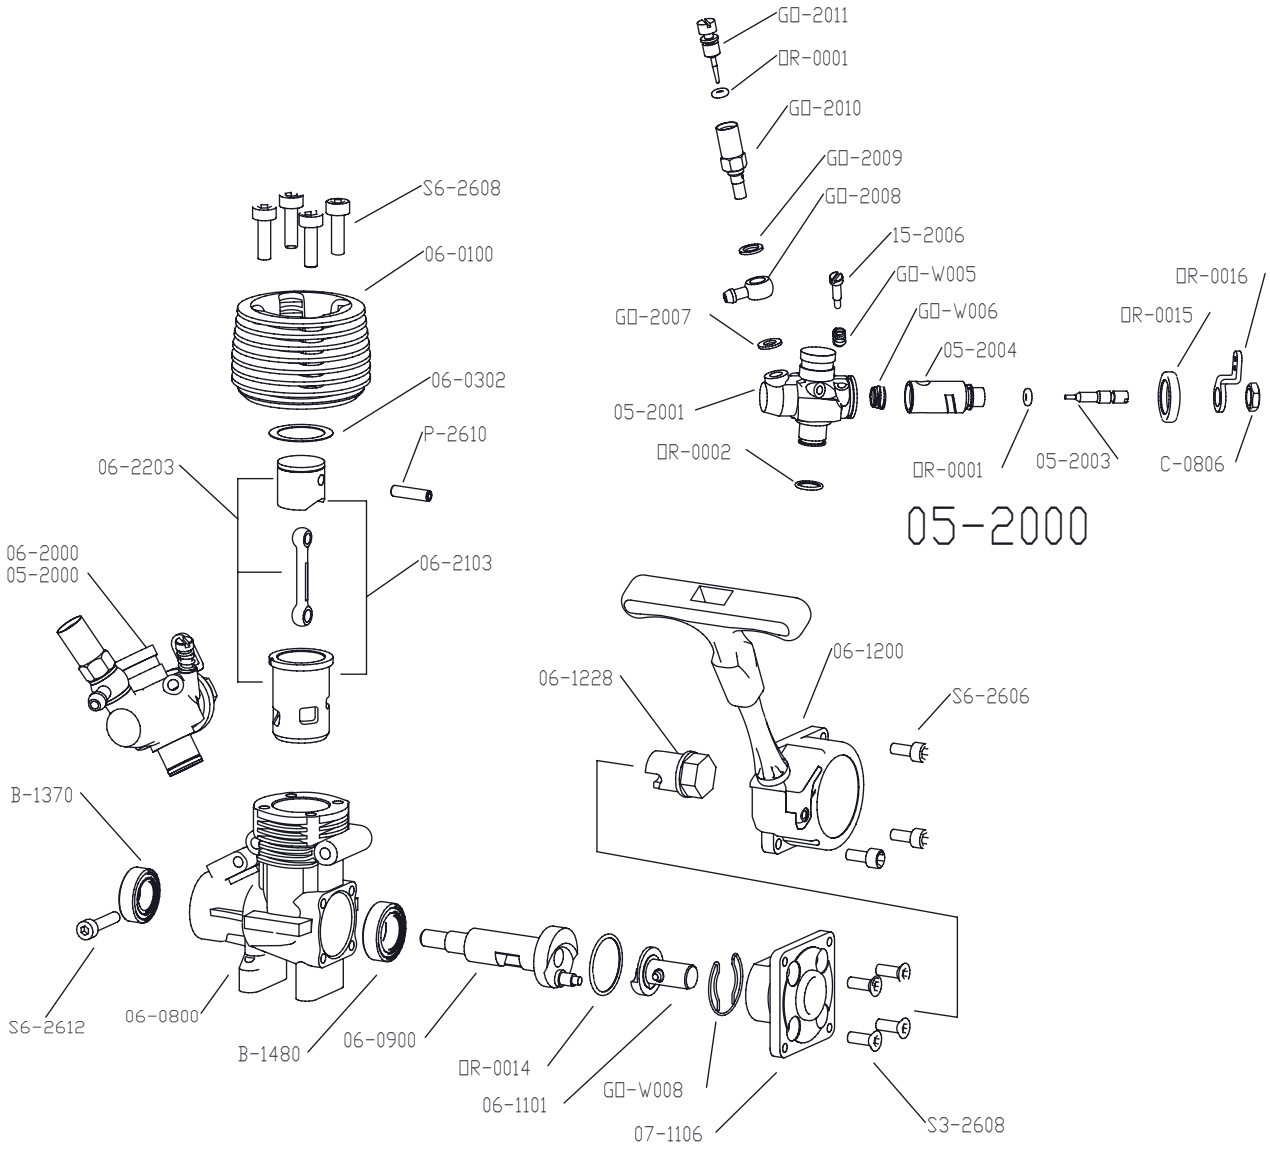

PARTS LIST

06-0100-P4	CYLINDER HEAD RED
06-0302	BURN ROOM WASHER 0.2MM
06-2103	CYLINDER SLEEVE/PISTON .06
06-2203	CYLINDER SLEEVE/PISTON/ROD .06
06-0600	CONNECTING ROD
06-0800	CRANKCASE
06-0900	CRANKSHAFT
06-1101	"T" AXLE
06-1228	START AXLE
07-1106	CONNECTIVE SEAT
07-1200	PULL STARTSET
05-2000	CARBURETOR REVOLVE
05-2001	CARBURETOR MAIN BODY
05-2003	THROTTLE NEEDLE
05-2004	SLIDE THROTTLE
GO-2007	FUEL SUPPLY WASHER 7.5X4
GO-2008	FUEL SUPPLY NIPPLE
GO-2009	FUEL SUPPLY WASHER ALUM. 7.5X5
GO-2010	NEEDLE VALVE ASSEMBLY
GO-2011	MAIN NEEDLE
GO-W005	SPRING
GO-W006	ROTOR SPRING
GO-W008	"C" SPRING
15-2006	THROTTLE STOP ADJUSTMENT SCREW
OR-0001	O-RING 2X1.8
OR-0002	O-RING 4X1
OR-0014	O-RING 10X1.3
OR-0015	DUST COVER
OR-0016	THROTTLE LEVER
S6-2608	SCREW 2.6X8 4PCS
S6-2612	SCREW 2.6X12
S6-2606	SCREW 2.6X6 4PCS
S3-2608	SCREW 2.6X8 4PCS
B-1370	BALL BEARING 5MM
B-1480	BALL BEARING 8MM
P-2610	PISTON GUDGEON PIN
C-0806	NUT